

RF Wireless Remote Control Radio Controller / Transmitter & Receiver

Package Include:

1 x Receiver: S2X-DC06-ANT2 / S2X-DC09-ANT2 / S2X-DC12-ANT2 / S2X-DC24-ANT2 (2 Channel / Four Control Mode)
1 x Transmitter: CB-2
1 x User manual

Feature:

Wireless control, easy to install

Direct power output; control Lights, Motors, Fans, electrically operated Doors / Locks / Windows / Blinds / Cars or Other Appliances.

You can turn on/off the receiver with transmitter (remote control) from any place within a reliable distance; the wireless RF signal can pass through walls, floors and doors.

With characteristics of reverse power protection and over current protection

Audible / visual indication

Use microcontroller model of EM78P156, an 8-bit microprocessor designed and developed with low-power and high-speed CMOS technology.

Reliable control: The transmitter (Encoding) and the receiver (Decoding) use an 8-bit code.

One/several transmitters can control one/several receivers simultaneously.

If you use two or more receivers in the same place, you can set them with different codes.

Transmitting Frequency: 315MHz / 433MHz

Working distance of transmitter and receiver with external extend antenna: 2000M / 6000ft (theoretically)

Receiver:

Model No.: S2X-DC06-ANT2 / S2X-DC09-ANT2 / S2X-DC12-ANT2 / S2X-DC24-ANT2

Channel: 2 CH

Control Modes: Toggle, Momentary, Latched, Momentary + Toggle

Coding Type: Fixed code

Coding Setting: By learning

Power Supply (Operating Voltage): DC6V (S2X-DC06-ANT2), DC12V±1V (S2X-DC12-ANT2), DC9V±1V (S2X-DC09-ANT2), DC24V±1V (S2X-DC24-ANT2)

Output: DC6V (S2X-DC06-ANT2), DC12V (S2X-DC12-ANT2), DC9V (S2X-DC09-ANT2), DC24V (S2X-DC24-ANT2)

PCB Size: 67mm x 50mm x 18mm

Case Size: 75mm x 54mm x 27mm

Static Current: ≤6mA

Maximum Working Current: 10A / each channel

External Extend Antenna:

Frequency Range: 300~450MHz

Impedance: 50Ω

Antenna Length: 15cm

Cable Length: 150cm

Weight: 35g

Anti-interference, waterproof, shielded wire set inside

Magnetic stand design for easy to install

Transmitter:

Model No.: CB-2

Channel: 2 CH

Remote Control Distance: 1000m / 3000ft (theoretically)

Encode: Fixed code by soldering

Unit size: 135mm x 42mm x 25mm

Power Supply: 1 x 6F22-9V battery (included, can be used for 12 months)

Usage:

Setting different control modes (We have set the receiver as Toggle control mode before delivery. If you want to use other control modes, do as following):

1) Setting control mode Toggle: Only connect Jumper-2.

Press big button: Turn on the relay 1, terminal OUT 1 (A&B) outputs DC power.

Press big button again: Turn off the relay 1, terminal OUT 1 no output.

Press small button: Turn on the relay 2, terminal OUT 2 (A&B) outputs DC power.

Press small button: Turn off the relay 2, terminal OUT 2 no output.

2) Setting control mode Momentary: Only connect Jumper-1.

Press and hold big button: Turn on the relay 1, terminal OUT 1 (A&B) outputs DC power.

Release big button: Turn off the relay 1, terminal OUT 1 no output.

Press and hold small button: Turn on the relay 2, terminal OUT 2 (A&B) outputs DC power.

Release small button: Turn off the relay 2, terminal OUT 2 no output.

3) Setting control mode Latched: Do not connect Jumper-1 and Jumper-2.
 Press big button: Turn on the relay 1, terminal OUT 1 (A&B) outputs DC power.
 Turn off the relay 2, terminal OUT 2 no output.
 Press small button: Turn on the relay 2, terminal OUT 2 (A&B) outputs DC power.
 Turn off the relay 1, terminal OUT 1 no output.

4) Setting control mode Momentary + Toggle: Connect Jumper-1 and Jumper-2.
 Control mode Momentary (Channel 1):
 Press and hold big button: Turn on the relay 1, terminal OUT 1 (A&B) outputs DC power.
 Release big button: Turn off the relay 1, terminal OUT 1 no output.
 Control mode Toggle (Channel 2):
 Press small button: Turn on the relay 2, terminal OUT 2 (A&B) outputs DC power.
 Press small button again: Turn off the relay 2, terminal OUT 2 no output.

We have learned remote control to the receiver. If you don't want the receiver to work with the remote control, you can delete all codes of remote controls, which are stored in the receiver.
 Operation: Press and hold the button of receiver until signal LED flashes slowly; release the button, LED keeps slow flash. That means all stored codes have been deleted successfully.

Learning the button of remote control:

- 1) Press the button of receiver; signal LED on the receiver keeps shining. The receiver enters into status of LEARNING.
- 2) Press any one button on remote control. If signal LED flashes quickly 15 times and turns off, it means learning is successful.
- 3) When receiver is in the status of LEARNING, press again the button of receiver, signal LED turns off, learning process will be discontinued.
- 4) The receiver can learn several remote controls with different codes.

