

RF Wireless Remote Control Radio Controller / Transmitter & Receiver

Package Include:

1 x Receiver: S1X-AC220 (1 Channel / Two Control Modes)
1 x Transmitter: HR-1
1 x User manual

Feature:

Wireless control, easy to install

Control Lights, Motors, Fans, electrically operated Doors/Locks/Windows/Blinds/Cars or Other Appliances with AC 100~240V.

You can turn on/off the receiver with transmitter (remote control) from any place within a reliable distance; the wireless RF signal can pass through walls, floors and doors.

With characteristics of reverse power protection and over current protection

Audible / visual indication

Use microcontroller model of EM78P156, an 8-bit microprocessor designed and developed with low-power and high-speed CMOS technology.

Reliable control: The transmitter (Encoding) and the receiver (Decoding) use an 8-bit code.

One/several transmitters can control one/several receivers simultaneously.

If you use two or more receivers in the same place, you can set them with different codes.

Transmitting Frequency: 315MHz

Receiver:

Model No.: S1X-AC220

Channel: 1 CH

Control Modes: Toggle, Momentary, Latched

Coding Type: Fixed code

Coding Setting: By learning

Power Supply (Operating Voltage): AC100~240V

PCB size: 75mm x 54mm x 22mm

Case size: 79mm x 58mm x 36mm

Maximum Working Current: 10A

Transmitter:

Model No.: HR-1

Channel: 1 CH

Remote Control Distance: 50m / 150ft (theoretically)

Encode: Learning code

Unit size: 86mm x 86mm x 16mm

Power Supply: 1 x 23A -12V battery (included, can be used for 12 months)

No wires: simply affix the remote control to any place you want by double faced adhesive tape.

Usage:

Setting different control modes (We have set the receiver as Toggle mode before delivery. If you want to use other modes, do as following):

1) Setting control mode Toggle: Only connect Jumper-2.

Press button: Turn on the relay, terminal OUT outputs AC power.

Press button again: Turn off the relay, terminal OUT no output.

2) Setting control mode Momentary: Only connect Jumper-1.

Press and hold button: Turn on the relay, terminal OUT outputs AC power.

Release button: Turn off the relay, terminal OUT no output.

We have learned remote control to the receiver. If you don't want the receiver to work with the remote control, you can delete all codes of remote controls, which are stored in the receiver.

Operation: Press and hold the button of receiver until signal LED flashes slowly; release the button, LED keeps slow flash. That means all stored codes have been deleted successfully.

Learning the button of remote control:

1) Press the button of receiver; signal LED on the receiver keeps shining. The receiver enters into status of LEARNING.

2) Press any one button on remote control. If signal LED flashes quickly 15 times and turns off, it means learning is successful.

3) When receiver is in the status of LEARNING, press again the button of receiver, signal LED turns off, learning process will be discontinued.

4) The receiver can learn several remote controls with different codes.

Application Circuit

