

RF Wireless Remote Control Kit (Model 0020745 6S2PUB-DC12+1CV-12)

The receiver is designed for one-transmitter-many-receivers system. Use a 12 buttons transmitter to control 6 receivers.

Package Include:

6 x Receiver: S2PUB-DC06 / S2PUB-DC09 / S2PUB-DC12 / S2PUB-DC24

1 x Transmitter: CV-12

1 x User manual

Feature:

Application: It can be used in industry automation, agriculture automation and home automation, such as factory, house, farm, pasture, vehicle, ship, offshore operation, aerial vehicle, field call, etc. It can remote control equipments on land, water and air, such as remote control lights, sirens, locks, motors, fans, winches, blinds, linear actuators, doors, windows, electric solenoid valves, security alarm, business signs and various devices.

Wireless control, easy to install.

Waterproof: The receiver has waterproof case and waterproof connector, it can be installed outdoors.

Relay Output: This receiver is relay output, it can be used to operate both DC and AC equipments. The terminals are NO / NC (normally open / normally closed), which serves as a switch. That means you should also connect a separate power supply to equipments.

High Power: Each channel can work at maximum current 30A, such as 360W/12V, 180W/6V, 270W/9V, 720W/24V, 3000W/110V, 6000W/220V.

With wired control terminals: You can connect sensors, limit switches, manual switches or external devices to control the receiver.

You can turn on/ off the receiver with transmitter (remote control) from any place within a reliable distance.

Wireless RF signal can pass through walls, floors, doors or windows.

With reverse power protection and over current protection.

Reliable control: The receiver only works with the transmitter which use same code.

One/several transmitters can control one/several receivers simultaneously.

You can use two or more units in the same place.

Receiver Parameters:

Model No. S2PUB-DC06 / S2PUB-DC09 / S2PUB-DC12 / S2PUB-DC24

Power Supply (Operating Voltage): DC6V (S2PUB-DC06), DC9V±1V (S2PUB-DC09), DC12V±1V (S2PUB-DC12), DC24V±2V (S2PUB-DC24)

Output: Relay output (Normally open and normally closed)

Working Voltage Range of Relay: AC110~240V or DC0~28V

Working Frequency: 315MHz / 433MHz

Channel: 2 CH

Control Modes: Toggle, Momentary, Latched, Momentary + Toggle

Static Current: ≤6mA

Maximum Working Current: 30A / each channel

PCB size: 140mm x 73mm x 18mm

Case size: 192mm x 100mm x 45mm

Work with Fixed code transmitters.

Transmitter:

Model No.: CV-12

Channel: 12CH

Remote Control Distance: 500m / 1500ft (theoretically)

Encode: Fixed code by Soldering

Unit size: 110mm x 50mm x 18mm

Power Supply: 1 x 23A -12V battery (included, can be used for 12 months)

Matching Transmitters:

The receiver can work with different transmitters, such as model CV-12 (500M), or CB-12 (1000M) etc.

Working Range:

With a transmitter (such as CV-12) to form a complete set, the maximum working distance can reach 500M in an open ground.

The maximum working distance is a theoretical data, it shall be operated in an open ground, no barriers, no any interference. But in the practice, it will be hindered by trees, walls or other constructions, and will be interfered by other wireless signals. Therefore, the actual distance may not reach this maximum working distance.

If you want to have a further working range, you can install an external antenna to the receiver, and you also can use a powerful transmitter, such as CB series transmitters.

Usage:

The receiver can be used to control both DC 0~28V and AC 110~240V equipments.

Notice: The receiver is relay output, not DC/AC power output. Initial state of relay output terminals: Terminals A and B are Normally Open; Terminals A and C are Normally Closed.

Wiring:

If you want to control a DC 12V lamp, do as following:

1) Connect the positive pole of DC power supply to terminal "L / +", and connect the negative pole of DC power supply to terminal "N / -".

2) Connect terminal B to the positive pole of DC power supply, connect terminal A to the positive pole of DC lamp, and connect the negative pole of DC lamp to the negative pole of DC power supply.

If you want to control an AC 220V lamp, do as following:

- 1) Connect the positive pole of DC power supply to terminal "L / +", and connect the negative pole of DC power supply to terminal "N / -".
- 2) Connect terminal B to the live wire of AC power supply, connect terminal A to one side of AC lamp, and connect another side of AC lamp to the neutral wire of AC power supply.

Setting different control modes (We have set the receiver as Toggle control mode before delivery. If you want to use other control modes, do as following operation):

Setting control mode Toggle: Only connect Jumper-2.

Control mode Toggle (with transmitter CV-12): Press -> On; Press again -> Off.

Press button 1: Turn on relay 1 of Receiver 1 (connect A and B, disconnect A and C), the lamp 1 is on.

Press button 1 again: Turn off relay 1 of Receiver 1 (disconnect A and B, connect A and C), the lamp 1 is off.

Press button 2: Turn on relay 2 of Receiver 1 (connect A and B, disconnect A and C), the lamp 2 is on.

Press button 2 again: Turn off relay 2 of Receiver 1 (disconnect A and B, connect A and C), the lamp 2 is off.

...

Press button 11: Turn on relay 1 of Receiver 6 (connect A and B, disconnect A and C), the lamp 11 is on.

Press button 11 again: Turn off relay 1 of Receiver 6 (disconnect A and B, connect A and C), the lamp 11 is off.

Press button 12: Turn on relay 2 of Receiver 6 (connect A and B, disconnect A and C), the lamp 12 is on.

Press button 12 again: Turn off relay 2 of Receiver 6 (disconnect A and B, connect A and C), the lamp 12 is off.

Setting control mode Momentary: Only connect Jumper-1.

Control mode Momentary (with transmitter CV-12): Press and hold -> On; Release -> Off.

Press and hold button 1: Turn on relay 1 of Receiver 1 (connect A and B, disconnect A and C), the lamp 1 is on.

Release button 1: Turn off relay 1 of Receiver 1 (disconnect A and B, connect A and C), the lamp 1 is off.

Press and hold button 2: Turn on relay 2 of Receiver 1 (connect A and B, disconnect A and C), the lamp 2 is on.

Release button 2: Turn off relay 2 of Receiver 1 (disconnect A and B, connect A and C), the lamp 2 is off.

...

Press and hold button 11: Turn on relay 1 of Receiver 6 (connect A and B, disconnect A and C), the lamp 11 is on.

Release button 11: Turn off relay 1 of Receiver 6 (disconnect A and B, connect A and C), the lamp 11 is off.

Press and hold button 12: Turn on relay 2 of Receiver 6 (connect A and B, disconnect A and C), the lamp 12 is on.

Release button 12: Turn off relay 2 of Receiver 6 (disconnect A and B, connect A and C), the lamp 12 is off.

Setting control mode Latched: Do not connect Jumper-1 and Jumper-2.

Control mode Latched (with transmitter CV-12): Press -> On, other relays Off; Press another button -> Off.

Press button 1: Turn on relay 1 of Receiver 1 (connect A and B, disconnect A and C), the lamp 1 is on.

Turn off relay 2 of Receiver 1 (disconnect A and B, connect A and C), the lamp 2 is off.

Press button 2: Turn on relay 2 of Receiver 1 (connect A and B, disconnect A and C), the lamp 2 is on.

Turn off relay 1 of Receiver 1 (disconnect A and B, connect A and C) the lamp 1 is off.

...

Press button 11: Turn on relay 1 of Receiver 6 (connect A and B, disconnect A and C), the lamp 11 is on.

Turn off relay 2 of Receiver 6 (disconnect A and B, connect A and C), the lamp 12 is off.

Press button 12: Turn on relay 2 of Receiver 6 (connect A and B, disconnect A and C), the lamp 12 is on.

Turn off relay 1 of Receiver 6 (disconnect A and B, connect A and C), the lamp 11 is off.

Setting control mode Momentary +Toggle (with transmitter CV-12): connect Jumper-1& Jumper-2

1) Control mode Momentary (Channel 1 of Receiver 1, 2, 3, 4, 5, 6): Press and hold -> On; Release -> Off.

Press and hold button 1: Turn on relay 1 of Receiver 1 (connect A and B, disconnect A and C), the lamp 1 is on.

Release button 1: Turn off relay 1 of Receiver 1 (disconnect A and B, connect A and C), the lamp 1 is off.

...

Press and hold button 11: Turn on relay 1 of Receiver 6 (connect A and B, disconnect A and C), the lamp 11 is on.

Release button 11: Turn off relay 1 of Receiver 6 (disconnect A and B, connect A and C) the lamp 11 is off.

2) Control mode Toggle (Channel 2 of Receiver 1, 2, 3, 4, 5, 6): Press -> On; Press again -> Off.

Press button 2: Turn on relay 2 of Receiver 1 (connect A and B, disconnect A and C), the lamp 2 is on.

Press button 2 again: Turn off relay 2 of Receiver 1 (disconnect A and B, connect A and C), the lamp 2 is off.

...

Press button 12: Turn on relay 2 of Receiver 6 (connect A and B, disconnect A and C), the lamp 12 is on.

Press button 12 again: Turn off relay 2 of Receiver 6 (disconnect A and B, connect A and C), the lamp 12 is off.

Wired control terminals:

The receiver has manual control terminals, you can connect external devices, sensors, or manual switches to control the receiver.

1) Signal input:

You can connect external devices (with low level output signal) to manual terminals 1 (Signal +), terminal 2 (Signal +) and terminal 3 (Signal -), then the external device's output signal can control the receiver.

When the external device outputs low level signal to manual terminal 1 and terminal 3, turns on the relay 1, (connect A and B, disconnect A and C), the lamp 1 is on.

When the external device stops to output signal, turns off the relay 1(disconnect A and B, connect A and C), the lamp 1 is off.
 When the external device outputs low level signal to manual terminal 2 and terminal 3, turns on the relay 2(connect A and B, disconnect A and C), the lamp 2 is on.
 When the external device stops to output signal, turns off the relay 2(connect A and B, disconnect A and C), the lamp 2 is on.

2) The manual switches:

You can connect manual switches to manual terminals 1, 2 and 3, then you can use manual switches to control the receiver.

When connect terminals 1 and 3, turns on the relay 1(connect A and B, disconnect A and C), the lamp 1 is on.

And when disconnect terminals 1 and 3, turns off the relay 1(disconnect A and B, connect A and C), the lamp 1 is off.

When connect terminals 2 and 3, turns on the relay 2(connect A and B, disconnect A and C), the lamp 2 is on.

And when disconnect terminals 2 and 3, turns off the relay 2(disconnect A and B, connect A and C), the lamp 2 is off.


How to pair the transmitter to the receiver:


- 1) Press the learning button of receiver for 1- 2 seconds; signal LED on the receiver is on. The receiver enters into status of LEARNING.
- 2) Press any one singular number on transmitter. If signal LED flashes quickly 15 times and turns off, it means learning is successful.
- 3) When receiver is in the status of LEARNING, press again the learning button, signal LED turns off, learning process will be discontinued.
- 4) The receiver can learn several remote controls with different codes.

Delete all transmitters:


We have learned remote control to the receiver. If you don't want the receiver to work with the remote control, you can delete all codes of remote controls, which are stored in the receiver.

Operation: Press and hold the learning button of receiver until signal LED flashes slowly; release the button, LED keeps slow flash. That means all stored codes have been deleted successfully.

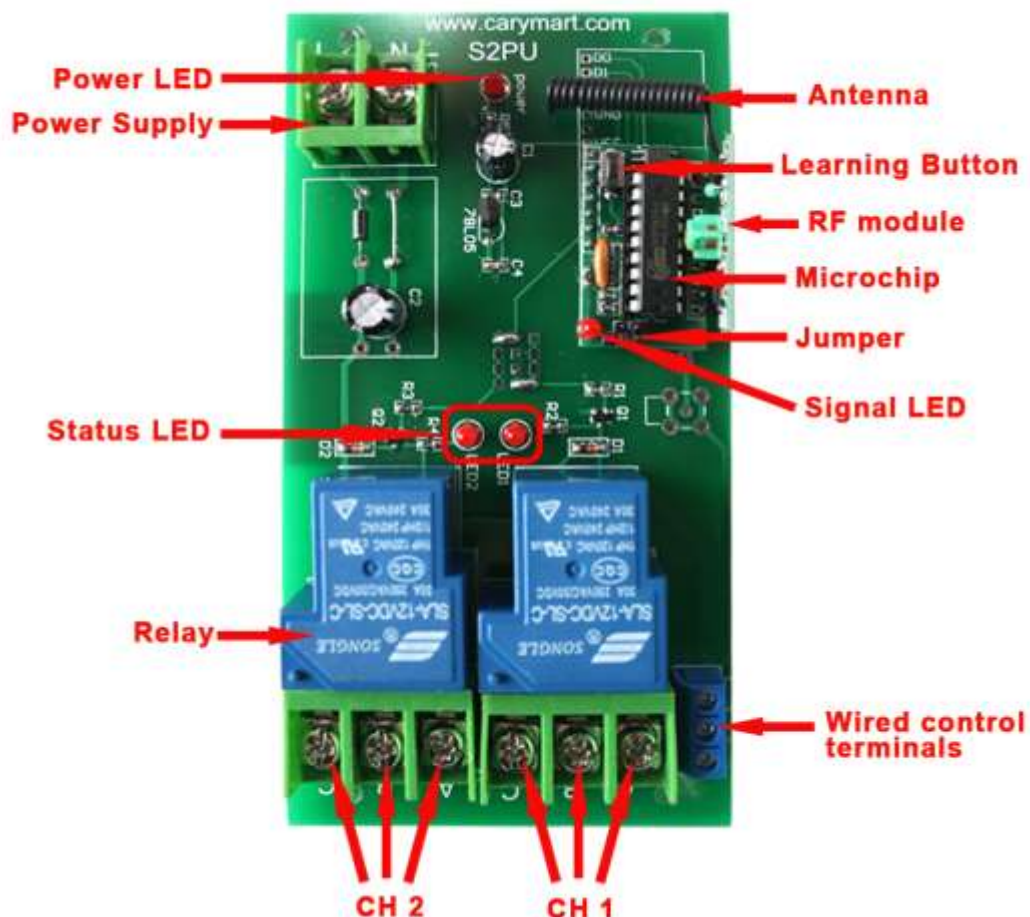

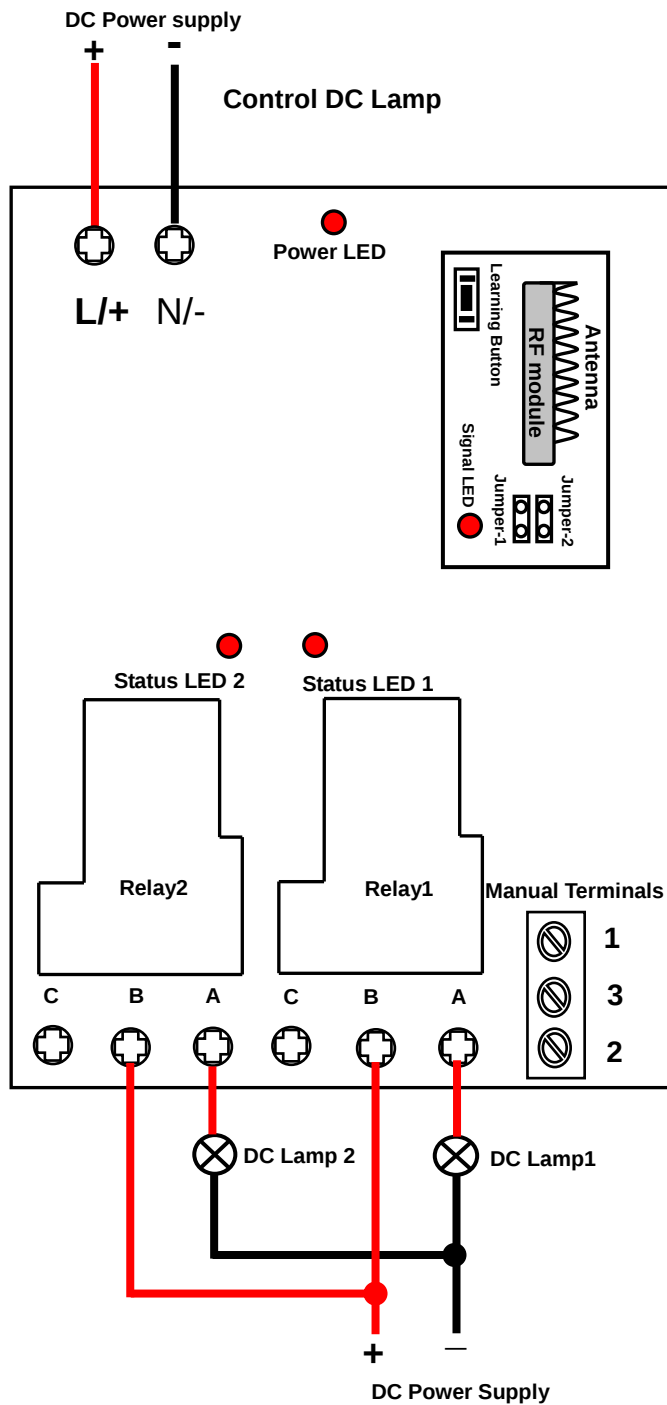

A, B = Normally Open; A, C = Normally Closed

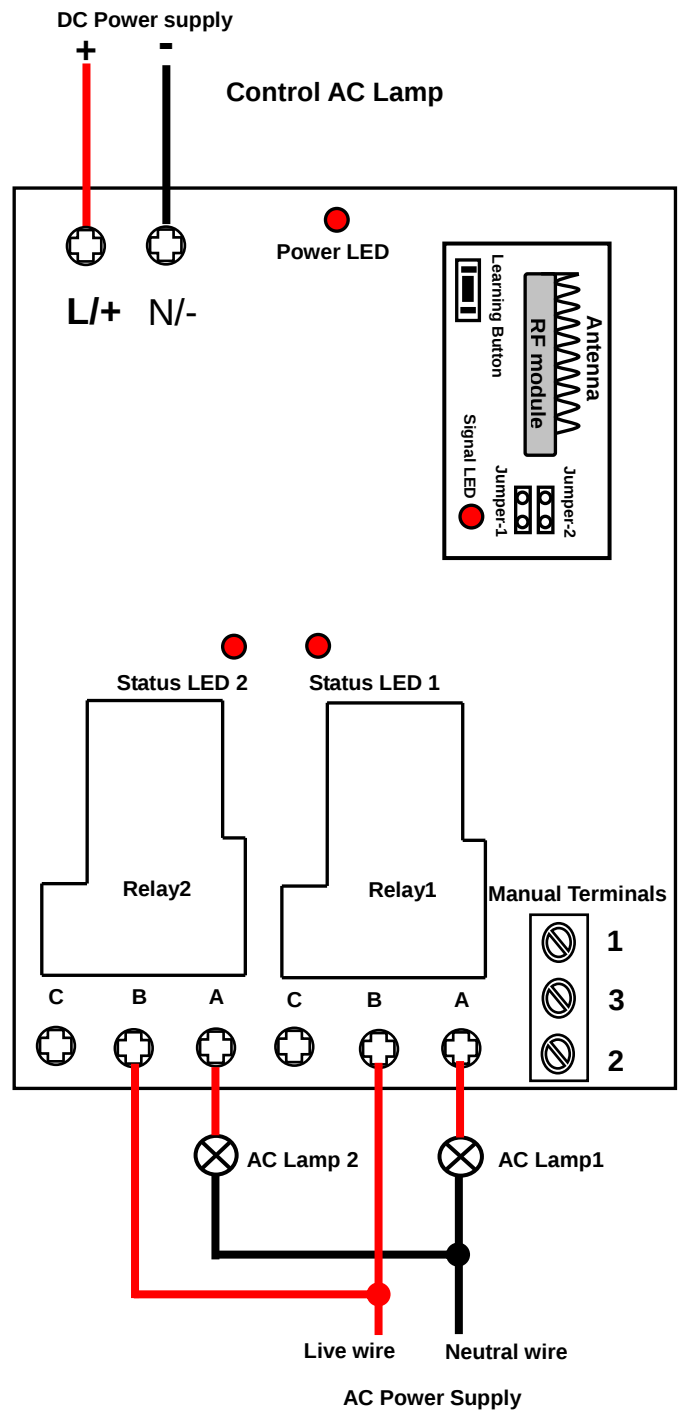

A, B = Normally Open; A, C = Normally Closed