

RF Wireless Remote Control Kit (Model 0020408 3S4UB-AC220-ANT2+1CB-12)

The receiver is designed for one-transmitter-many-receivers system. Use a 12 buttons transmitter to control 3 receivers.

Package Include:

3 x Receiver: S4UB-AC220-ANT2 (4 Channel / Four Control Modes)
1 x Transmitter: CB-12
1 x User manual

Feature:

Application: It can be used in industry automation, agriculture automation and home automation, such as factory, house, farm, pasture, vehicle, ship, offshore operation, aerial vehicle, field call, etc. It can remote control equipments on land, water and air, such as remote control lights, sirens, locks, motors, fans, winches, blinds, linear actuators, doors, windows, electric solenoid valves, security alarm, business signs and various devices.

Wireless control, easy to install.

Universal input: Support voltage of AC110V (100V~120V), widely used in US, Canada... and voltage of AC220V (200V~240V), used in UK, France...

Relay Output: This receiver is relay output, it can be used to operate both DC and AC equipments. The terminals are NO / NC (normally open / normally closed), which serves as a switch. That means you should also connect a separate power supply to equipments.

With the magnetic sucker antenna, it can have a further working range.

You can turn on/ off the receiver with transmitter (remote control) from any place within a reliable distance.

Wireless RF signal can pass through walls, floors, doors or windows.

With reverse power protection and over current protection.

Reliable control: The receiver only works with the transmitter which use same code.

One/several transmitters can control one/several receivers simultaneously.

You can use two or more units in the same place.

Receiver Parameters:

Model No.: S4UB-AC220-ANT2

Power Supply (Operating Voltage): AC100~240V (110V/120V/220V/240V)

Output: Relay output (Normally open and normally closed)

Working Voltage Range of Relay: AC110~240V or DC0~28V

Working Frequency: 315MHz / 433MHz

Channel: 4 CH

Control Modes: Toggle, Momentary, Latched, Momentary + Toggle

Static Current: ≤6mA

Maximum Working Current: 10A / each channel

PCB size: 94mm x 76mm x 21mm

Case size: 100mm x 80mm x 28mm

Work with Fixed code transmitters

Transmitter:

Model No.: CB-12

Channel: 12 CH

Remote Control Distance: 1000m / 3000ft (theoretically)

Encode: Fixed code by bonding pad encoded

Unit size: Unit Size: 135mm x 42mm x 25mm

Power Supply: 9V (1 x 6F22 -9V battery, can be used for 12 months)

Matching Transmitters:

The receiver can work with different transmitters, such as model CV-12 (500M), or CB-12(1000M) etc.

Working Range:

Super long range, with a transmitter (such as CB-12) to form a complete set, the maximum working distance can reach 2000M in an open ground.

The maximum working distance is a theoretical data, it shall be operated in an open ground, no barriers, no any interference. But in the practice, it will be hindered by trees, walls or other constructions, and will be interfered by other wireless signals. Therefore, the actual distance may not reach this maximum working distance.

Magnetic Sucker Antenna:

Frequency Range: 300~450MHz

Impedance: 50Ω

Antenna Length: 15cm

Cable Length: 1.5m, we also can offer longer cable, such as 5meters, 10meters, and 30meters.

Anti-interference, waterproof, shielded wire set inside.

Magnetic stand design for easy to install.

Usage:

The receiver can be used to control both DC 0~28V and AC 110~240V equipments.

Notice: The receiver is relay output, not DC/AC power output. Initial state of relay output terminals: Terminals B and C are Normally Open; Terminals A and B are Normally Closed.

Wiring:

If you want to control a DC 12V lamp, do as following:

- 1) Connect the live wire of AC power supply to terminal "L / +" of INPUT, and connect the neutral wire of AC power supply to terminal "N / -" of INPUT.
- 2) Connect terminal C to the positive pole of DC power supply, connect terminal B to the positive pole of DC lamp, and connect the negative pole of DC lamp to the negative pole of DC power supply.

If you want to control an AC 220V lamp, do as following:

- 1) Connect the live wire of AC power supply to terminal "L / +" of INPUT, and connect the neutral wire of AC power supply to terminal "N / -" of INPUT.
- 2) Connect terminal C to the live wire of AC power supply, connect terminal B to one side of AC lamp, and connect another side of AC lamp to the neutral wire of AC power supply

Setting different control modes:

Setting different control modes: (We have set the receiver in toggle mode before delivery, if you want to use other modes, do as following operation.)

- 1) Learning Toggle control mode (with the transmitter CB-12): When the receiver is in the status of LEARNING, press button 1 of the remote control to learn receiver 1, press button 5 to learn receiver 2, press button 9 to learn receiver 3.

Control mode Toggle (remote button 1, 2, 3 and 4 are for receiver 1; remote button 5, 6, 7 and 8 are for receiver 2; remote button 9, 10, 11 and 12 are for receiver 3): Press -> On; Press again -> Off.

Press button 1: Turn on relay 1 of receiver 1 (connect B and C, disconnect A and B), the lamp 1 is on.

Press button 1 again: Turn off relay 1 of receiver 1 (disconnect B and C, connect A and B), the lamp 1 is off.

...

Press button 4: Turn on relay 4 of receiver 1 (connect B and C, disconnect A and B), the lamp 4 is on.

Press button 4 again: Turn off relay 4 of receiver 1 (disconnect B and C, connect A and B), the lamp 4 is off.

...

Press button 5: Turn on relay 1 of receiver 2 (connect B and C, disconnect A and B), the lamp 5 is on.

Press button 5 again: Turn off relay 1 of receiver 2 (disconnect B and C, connect A and B), the lamp 5 is off.

...

Press button 8: Turn on relay 4 of receiver 2 (connect B and C, disconnect A and B), the lamp 8 is on.

Press button 8 again: Turn off relay 4 of receiver 2 (disconnect B and C, connect A and B), the lamp 8 is off.

...

Press button 9: Turn on relay 1 of receiver 3 (connect B and C, disconnect A and B), the lamp 9 is on.

Press button 9 again: Turn off relay 1 of receiver 3 (disconnect B and C, connect A and B), the lamp 9 is off.

...

Press button 12: Turn on relay 4 of receiver 3 (connect B and C, disconnect A and B), the lamp 12 is on.

Press button 12 again: Turn off relay 4 of receiver 3 (disconnect B and C, connect A and B), the lamp 12 is off.

- 2) Learning Momentary control mode (with the transmitter CB-12): When the receiver is in the status of LEARNING, press button 2 of the remote control to learn receiver 1, press button 6 to learn receiver 2, press button 10 to learn receiver 3.

Control mode Momentary (remote button 1, 2, 3 and 4 are for receiver 1; remote button 5, 6, 7 and 8 are for receiver 2; remote button 9, 10, 11 and 12 are for receiver 3): Press and hold -> On; Release -> Off.

Press and hold button 1: Turn on relay 1 of receiver 1 (connect B and C, disconnect A and B), the lamp 1 is on.

Release button 1: Turn off relay 1 of receiver 1 (disconnect B and C, connect A and B), the lamp 1 is off.

...

Press and hold button 4: Turn on relay 4 of receiver 1 (connect B and C, disconnect A and B) the lamp 4 is on.

Release button 4: Turn off relay 4 of receiver 1 (disconnect B and C, connect A and B), the lamp 4 is off.

...

Press and hold button 5: Turn on relay 1 of receiver 2 (connect B and C, disconnect A and B), the lamp 5 is on.

Release button 5: Turn off relay 1 of receiver 2 (disconnect B and C, connect A and B), the lamp 5 is off.

...

Press and hold button 8: Turn on relay 4 of receiver 2 (connect B and C, disconnect A and B), the lamp 8 is on.

Release button 8: Turn off relay 4 of receiver 2 (disconnect B and C, connect A and B), the lamp 8 is off.

...

Press and hold button 9: Turn on relay 1 of receiver 3 (connect B and C, disconnect A and B), the lamp 9 is on.

Release button 9: Turn off relay 1 of receiver 3 (disconnect B and C, connect A and B), the lamp 9 is off.

...

Press and hold button 12: Turn on relay 4 of receiver 3 (connect B and C, disconnect A and B), the lamp 12 is on.

Release button 12: Turn off relay 4 of receiver 3 (disconnect B and C, connect A and B), the lamp 12 is off.

- 3) Learning Latched control mode (with the transmitter CB-12): When the receiver is in the status of LEARNING, press button 3 of the remote control to learn receiver 1, press button 7 to learn receiver 2, press button 11 to learn receiver 3.

Control mode Latched (remote button 1, 2, 3 and 4 are for receiver 1; remote button 5, 6, 7 and 8 are for receiver 2; remote button 9, 10, 11 and 12 are for receiver 3): Press -> On, other relays Off; Press other button -> Off.

Press button 1: Turn on relay 1 of receiver 1 (connect B and C, disconnect A and B), the lamp 1 is on.

Turn off other relay (disconnect B and C, connect A and B), the lamp 2, 3 and 4 are off.

...

Press button 4: Turn on relay 4 of receiver 1 (connect B and C, disconnect A and B), the lamp 4 is on.

Turn off other relay (disconnect B and C, connect A and B), the lamp 1, 2 and 3 are off.

Press button 5: Turn on relay 1 of receiver 2 (connect B and C, disconnect A and B), the lamp 5 is on.
Turn off other relay (disconnect B and C, connect A and B), the lamp 6, 7 and 8 are off.

...

Press button 8: Turn on relay 4 of receiver 2 (connect B and C, disconnect A and B), the lamp 8 is on.
Turn off other relay (disconnect B and C, connect A and B), the lamp 5, 6 and 7 are off.

Press button 9: Turn on relay 1 of receiver 3 (connect B and C, disconnect A and B), the lamp 9 is on.
Turn off other relay (disconnect B and C, connect A and B), the lamp 10, 11 and 12 are off.

...

Press button 12: Turn on relay 4 of receiver 3 (connect B and C, disconnect A and B), the lamp 12 is on.
Turn off other relay (disconnect B and C, connect A and B), the lamp 9, 10 and 11 are off.

4) Learning Momentary (Channel 1~2 of receiver 1, 2 and 3) + Toggle (3, 4 channel of receiver 1, 2 and 3) control mode (with the transmitter CB-12):
When the receiver is in the status of LEARNING, press button 4 of the remote control to learn receiver 1, press button 8 to learn receiver 2, press button 12 to learn receiver 3.


How to pair the transmitter to the receiver:

- 1) Press the learning button of receiver for 1- 2 seconds; signal LED on the receiver is on. The receiver enters into status of LEARNING.
- 2) Press any one button on transmitter. If signal LED flashes quickly 15 times and turns off, it means learning is successful.
- 3) When receiver is in the status of LEARNING, press again the learning button, signal LED turns off, learning process will be discontinued.
- 4) The receiver can learn several remote controls with different codes.

Delete all transmitters:


We have learned remote control to the receiver. If you don't want the receiver to work with the remote control, you can delete all codes of remote controls, which are stored in the receiver.

Operation: Press and hold the learning button of receiver until signal LED flashes slowly; release the button, LED keeps slow flash. That means all stored codes have been deleted successfully.

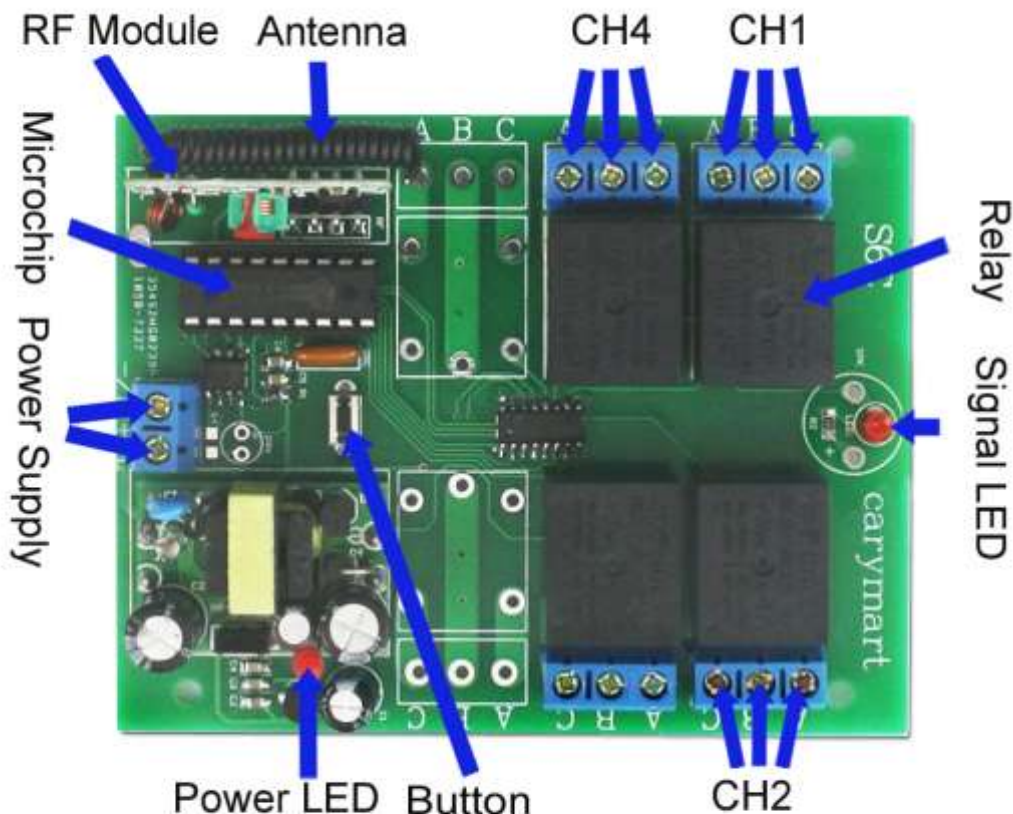

A, B=Normally Closed; B, C=Normally Open.

Control DC Lamp

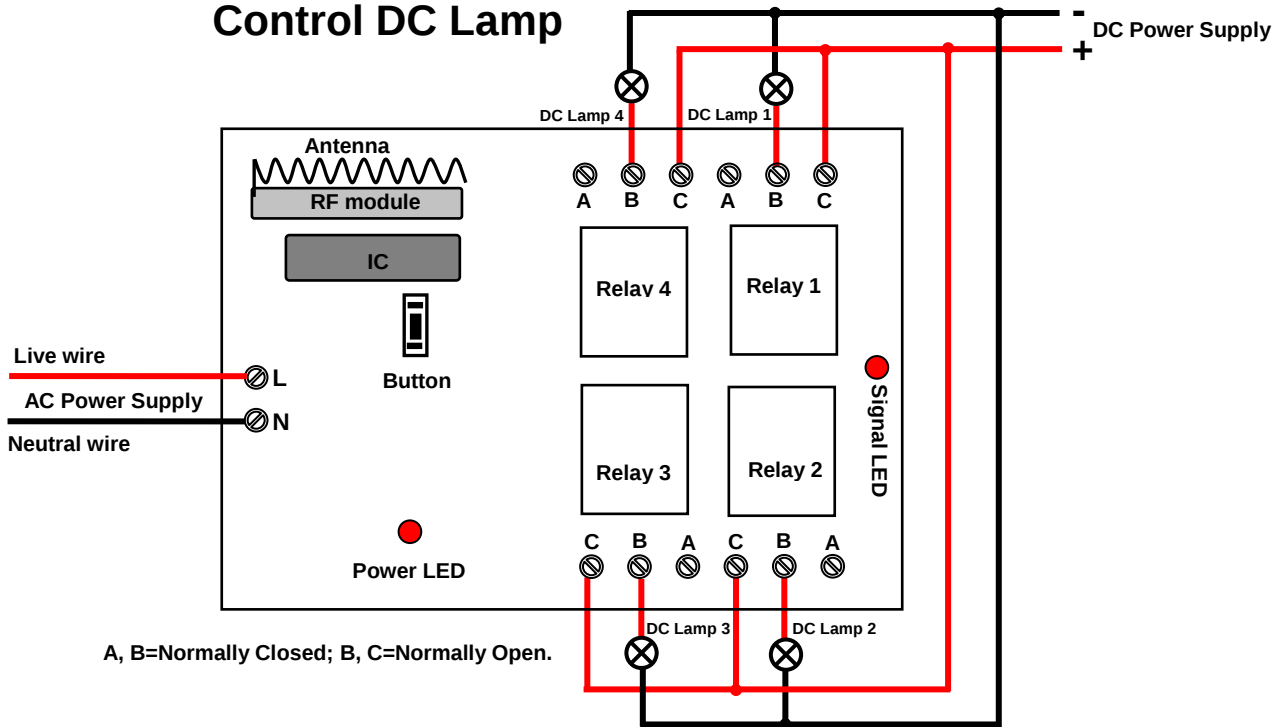

Control AC Lamp

